


5.0 - Example of connection DP1-DP2 P 300W - 500W

with recommended Quick® accessories for the operation of the windlass

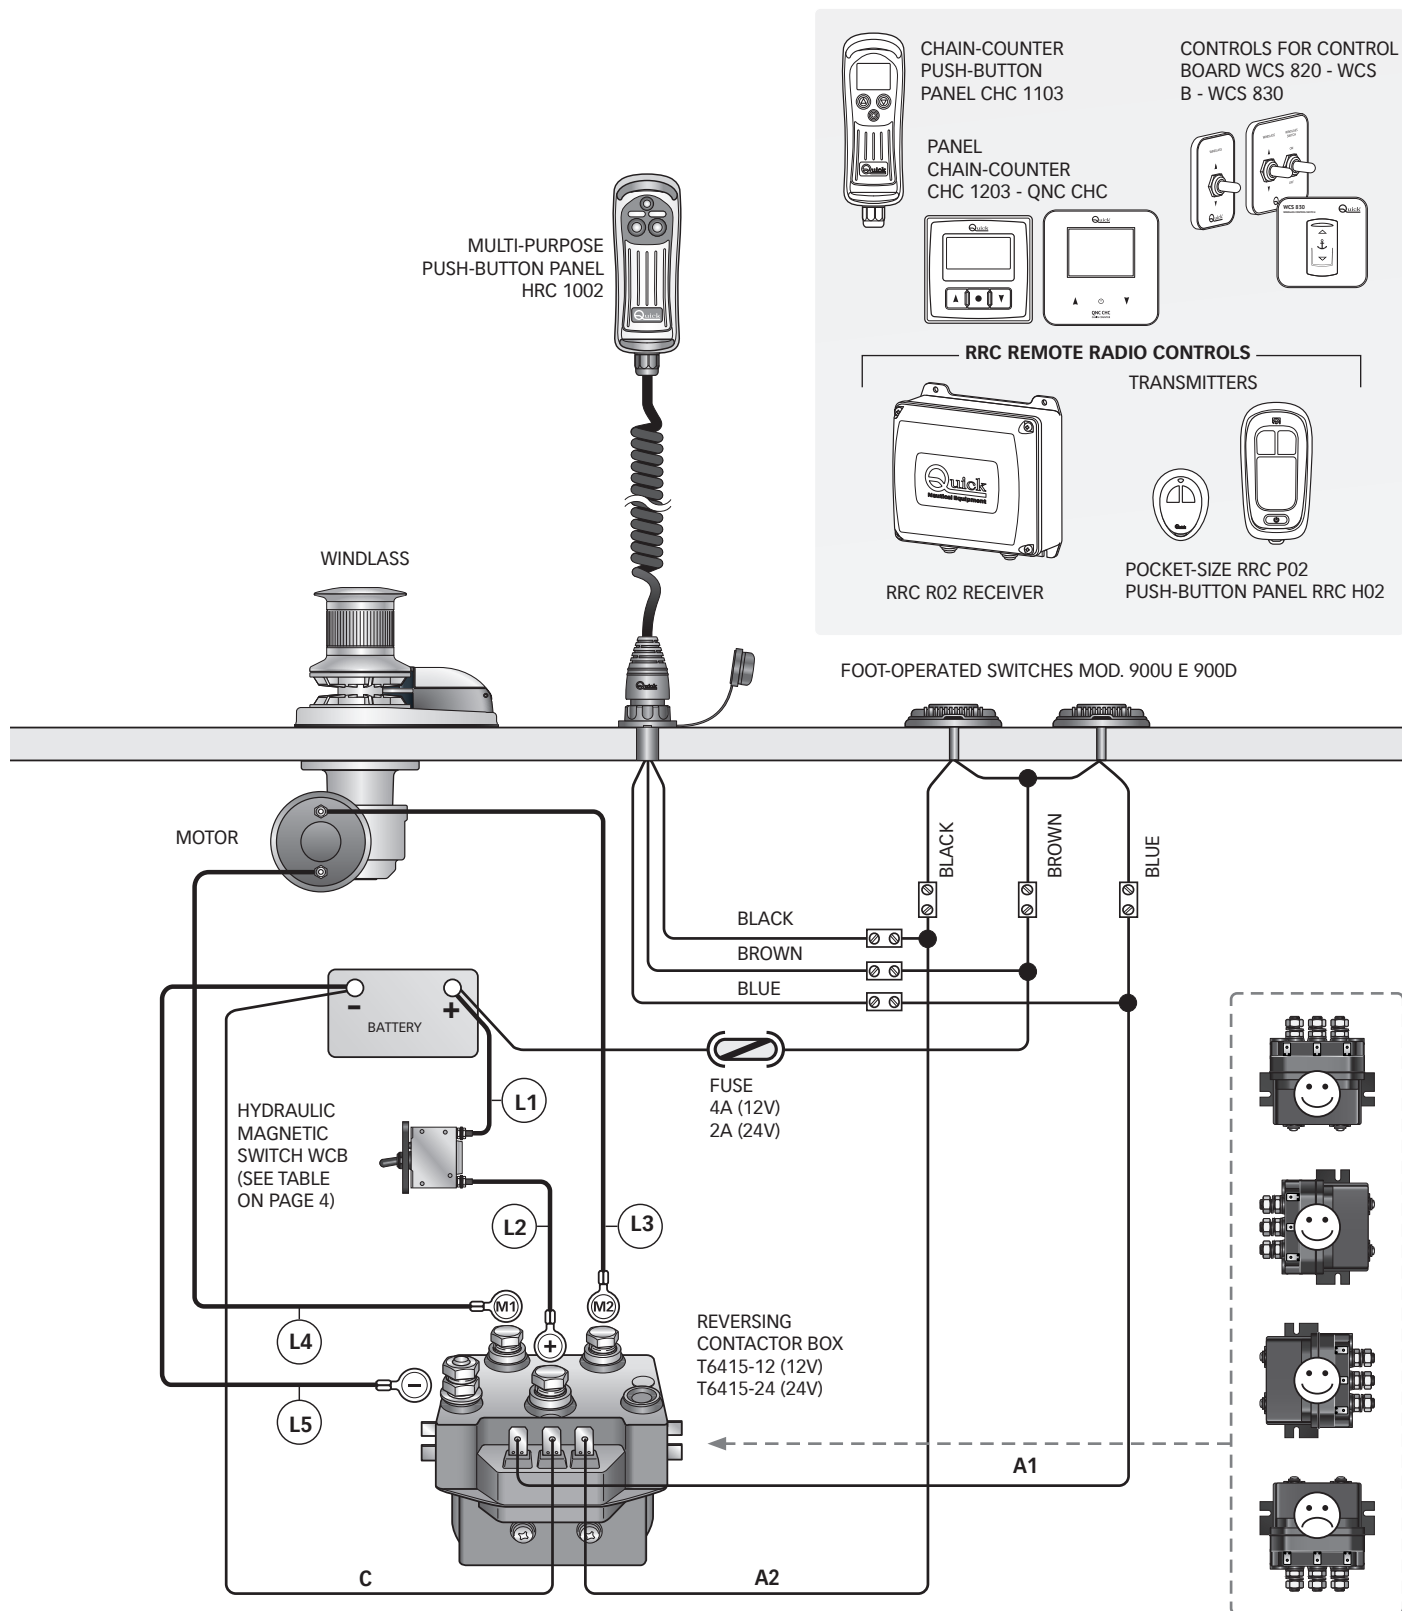

$$L = (L1) + (L2) + (L3) + (L4) + (L5)$$